

DOCK LEVELLER

OPERATING INSTRUCTIONS

VEHICLE ARRIVING AND DOCKS UP AGAINST THE DOCK LEVELLER
 Note: Dock Leveller remains in cross traffic position i.e. Resting in pit.

HAND HYDRAULIC MODEL HHP

OPEN VEHICLE DOORS

ELECTRO HYDRAULIC MODEL EHP

FIRST TWO PALLET/BOXES, etc. on leading row/edge of rear truck floor - can be offloaded by counter balance fork lift truck.

Operate handle to Raise

RAISE THE DOCK LEVELLER PLATFORM BY INSERTING UP/DOWN CONTROL HANDLE
 Note: Lip swings up, by operating other handle

Press **GREEN** Button

LOWER DOCK LEVELLER PLATFORM onto vehicle truck floor.
 Note: Hand valves to be open

Open valve to Lower

LOADING & OFFLOADING - Hand Pallet Truck
 - Power Pallet Truck
 - Forklift Truck

Dock Leveller automatically floats up and down with the floor of the vehicle as load springs and tyre's floats up and down.

Operate handle to Raise

WHEN LOADING OR OFFLOADING IS COMPLETE the dock leveller deck is **raised** until it clears the vehicle. Open valve to **lower** lip.

LIGHT Red
 Emergency STOP ONLY - Red


Press **GREEN** Button

THE DOCK LEVELLER IS THEN **LOWERED** into the cross traffic position.

Open valve to Lower

VEHICLE DOORS ARE CLOSED

VEHICLE DEPARTS

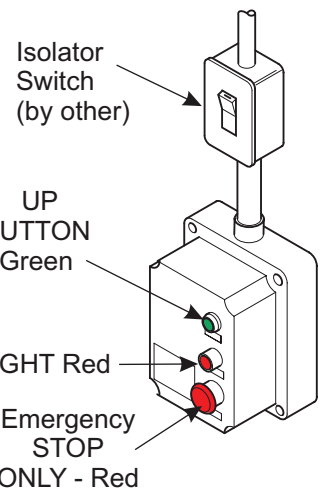

DDL Equipment Pty Ltd

Reg No: 2005/043409/07

E-Mail: sales@ddl.co.za

Website: www.ddl.co.za

Tel: 011 393 1209

Fax: 011 393 1169

6 Neutron Road, Chloorkop, Kempton Park

Ref: DE.16

